


399 SENSOR

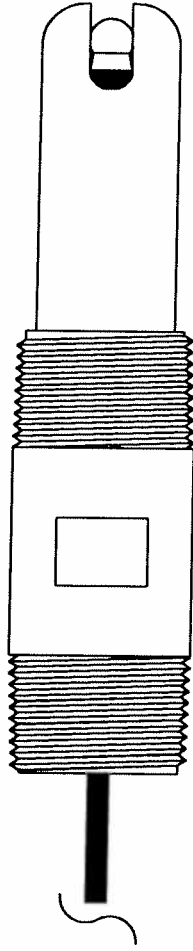

WIRING CONNECTIONS

399 WIRES

- RED WIRE - REFERENCE
- BLACK WIRE - pH/ORP SIGNAL
- GREEN WIRE - DRAIN
- BLUE WIRE - TEMP. COMP.
- YELLOW WIRE - TEMP. COMP.


1002 TERM STRIP

- 4
- 6
- 7
- 4
- 5


1003 TERM STRIP

- 15
- 14
- 16
- 15
- 17

NOTE 1: WIRING DIAGRAMS FOR MOST ANALYZERS ARE AVAILABLE UPON REQUEST. CONTACT THE VAN LONDON TECHNICAL DEPARTMENT AT 1-800-231-6069.

DRAWN JF	DATE 10/96	 VAN LONDON CO. INC. HOUSTON, TEXAS
CHECKED 399P1	REVISION	
APPROVED		399 SENSOR WITH INTERNAL PREAMP WIRED TO ROSEMOUNT 1000 SERIES
SCALE NONE		

399 SENSOR

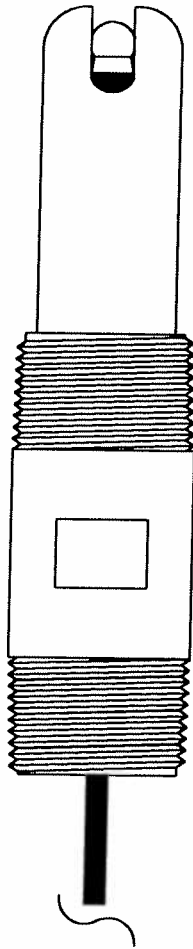

WIRING CONNECTIONS

399 WIRES

- BLACK WIRE - pH SIGNAL
- YELLOW WIRE - REFERENCE
- GREEN WIRE - (-) 5VDC
- WHITE WIRE - (+) 5VDC


1050PH TERM STRIP

- S3
- S4
- S1
- S2

1181PH TERM STRIP

- TB2-1
- TB2-2
- TB2-3
- TB2-4

NOTE 1: WIRING DIAGRAMS FOR MOST ANALYZERS ARE AVAILABLE UPON REQUEST. CONTACT THE VAN LONDON TECHNICAL DEPARTMENT AT 1-800-231-6069.

DRAWN JF	DATE 10/96	 VAN LONDON CO. INC. HOUSTON, TEXAS	
CHECKED 399P2	REVISION	399 SENSOR WITH INTERNAL PREAMP WIRED TO ROSEMOUNT TRANSMITTER	
APPROVED		SCALE	NONE