


2054APH WIRING DIAGRAMS

pH ELECTRODE WITH TEMP. COMP.
WIRED TO 2054A WITH P/N 2011854

PREAMP TERM STRIP


P/N 2011854 TERM STRIP

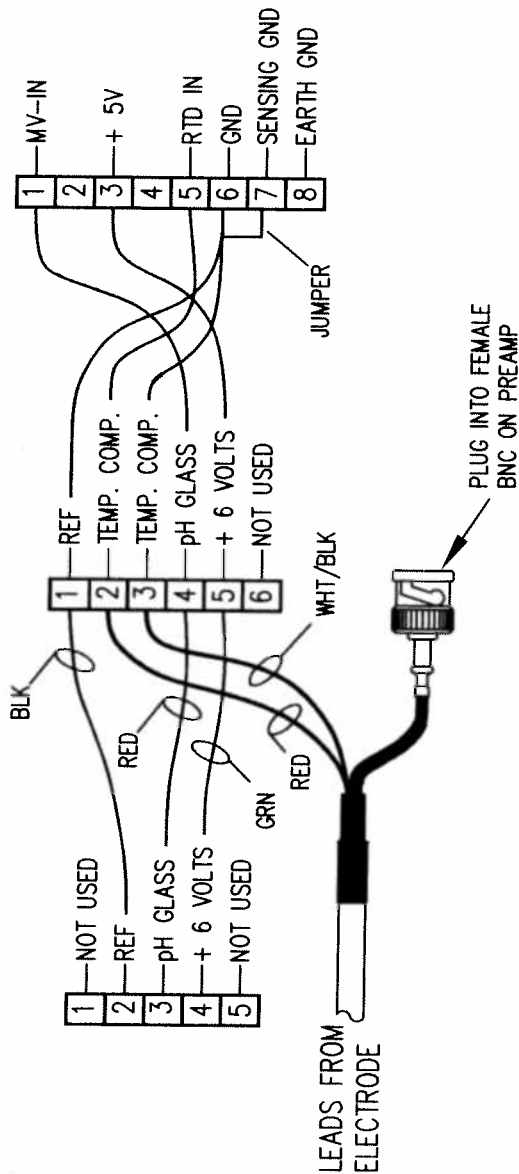

MARK VII ELECTRODE WITH TEMP. COMP.
WIRED TO 2054A WITH P/N 2010154


PREAMP TERM STRIP

MARK VII TERM STRIP

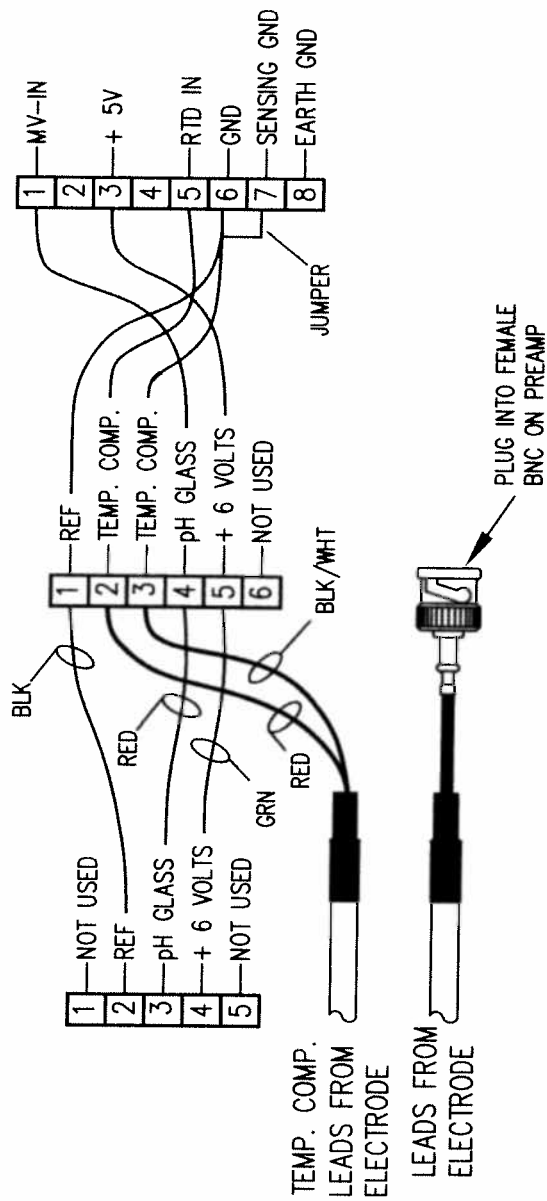


2054APH WIRING DIAGRAMS

pH ELECTRODE WITH NO TEMP. COMP.
WIRED TO 2054A WITH INTEGRAL PREAMP

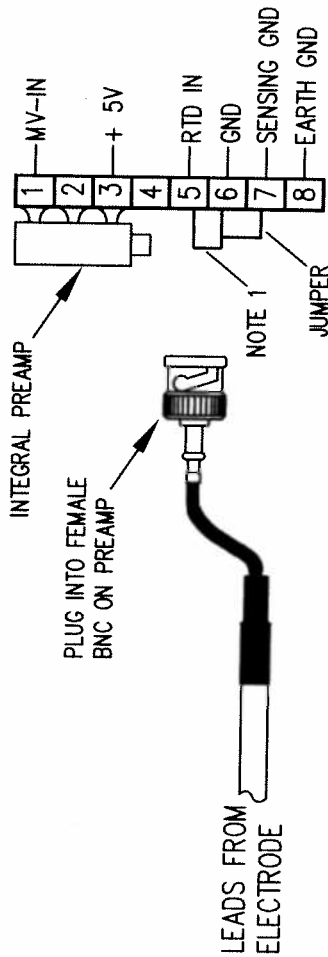

NOTE 1: IF AUTOMATIC TEMP. COMP. IS NOT USED,
SELECT MANUAL TEMP. COMP. OPTION IN
TRANSMITTER

pH ELECTRODE WITH TEMP. COMP.
WIRED TO 2054A WITH INTEGRAL PREAMP

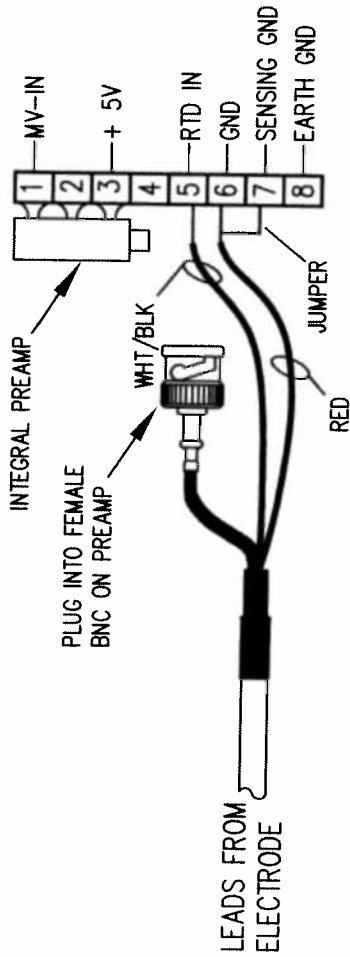

pH ELECTRODE WITH TEMP. COMP.
WIRED TO 2054A WITH P/N 2011854

